

PANEL STRIPS/MULLION CASINGS



The strip which is applied over window jamb edges in a multiple opening window. Sometimes called a Panel Strip. Also used for decorative wall treatments.



WM 955 3/8 x 2-1/4 20 pcs.

WM 956 3/8 x 2 20 pcs.

WM 957 3/8 x 1-3/4 30 pcs.



WM 960 3/8 x 2-1/4 20 pcs.

WM 962 3/8 x 2 20 pcs.

WM 963 3/8 x 1-3/4 30 pcs.



WM 965 3/8 x 2-1/4 20 pcs.

WM 967 3/8 x 2 20 pcs.

WM 968 3/8 x 1-3/4 30 pcs.



WM 970 3/8 x 2-1/4 20 pcs.

WM 972 3/8 x 2 20 pcs.

WM 973 3/8 x 1-3/4 30 pcs.



WM 975 3/8 x 2-1/4 20 pcs.

WM 977 3/8 x 2 20 pcs.

WM 978 3/8 x 1-3/4 30 pcs.



WM 980 3/8 x 2-1/4 20 pcs.

WM 982 3/8 x 2 20 pcs.

WM 983 3/8 x 1-3/4 30 pcs.




WM 985 3/8 x 2-1/4 20 pcs.

WM 987 3/8 x 2 20 pcs.

WM 988 3/8 x 1-3/4 30 pcs.

SHELF CLEAT

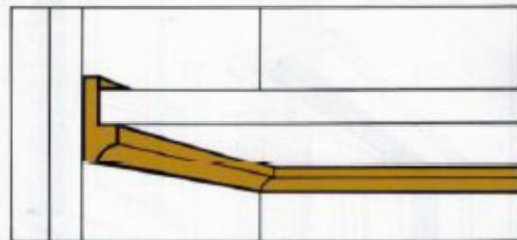

Commonly used in closets, cabinets & bookcases to support the shelves. Also called Shelf Strip.




WM 990
11/16 x 1-1/2
25 pcs.




WM 995
3/4 x 3/4
50 pcs.

CHAMFER STRIP

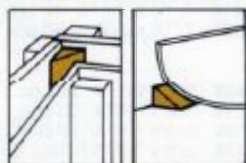

Used in highway & dam construction forms, making a chamfered edge at concrete corners. Also used where kitchen cabinet tops meet the wall. Also used as a linoleum Cove, (under linoleum where it extends up the wall).

INSIDE CORNER

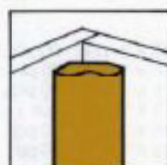


Joins two walls at inside corner. Solves problems of uneven joints where butted panels, wallpaper, painted or contrasting surfaces meet. Gives corners a decorative finished look.



WM 999
5/16 x 1 50 pcs.


FLAT STOOLS

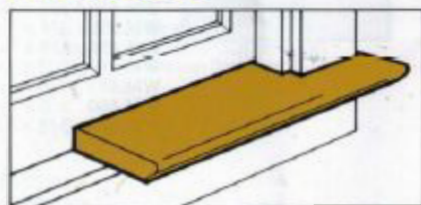

A moulded interior trim member serving as a sash or window-frame sill cap. Stools may be "beveled-rabbeted" or "rabbeted" to receive the window-frame sill or "non-rabbeted." Some "non-beveled" or "non-rabbeted" stools include a tongue to fit in the groove of the window-frame sill.



WM 1021
11/16" x width specified

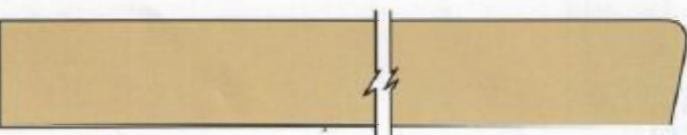

WM 1022
11/16" x width specified

SHINGLE/PANEL MOULDINGS

May be used in ways similar to Panel Moulding.

Originally used on the rake of a building or around exterior window frames.



WM 207
11/16 x 2-1/2
12 pcs.



WM 209
11/16 x 2
12 pcs.



WM 210
11/16 x 1-5/8
20 pcs.



WM 212
11/16 x 2-1/2
12 pcs.



WM 213
9/16 x 2
20 pcs.




WM 217
11/16 x 1-3/4
20 pcs.



WM 218
11/16 x 1-1/2
25 pcs.



BATTENS

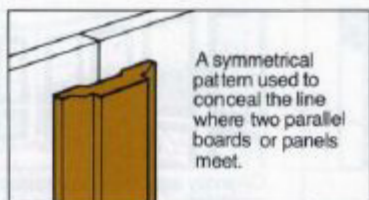

A symmetrical pattern used to conceal the line where two parallel boards or panels meet.



WM 224 9/16 x 2-1/4
12 pcs.



WM 229
11/16 x 1-5/8
20 pcs.


HAND RAIL



Used as a hand support in a stairwell.



WM 230
1-1/2 x 1-11/16
6 pcs.

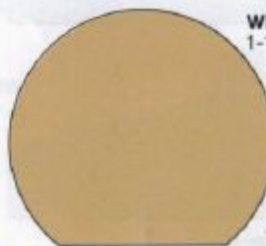

WM 231
1-1/2 x 1-11/16
6 pcs.



WM 240
1-1/4 x 2-1/4
6 pcs.

ROUNDS

Most often used as a closet pole or room divider.



WM 232
1-5/8 6 pcs.

WM 233
1-5/16 10 pcs.

WM 234
1-1/16
12 pcs.

SQUARES



Used in cabinet framing for shoe or other utilitarian uses. Also used as baluster for supporting stair handrails.



WM 236 6 pcs.
1-5/8 x 1-5/8

WM 237 9 pcs.
1-5/16 x 1-5/8

WM 238 12 pcs.
1-1/16 x 1-1/8

WM 239
3/4 x 3/4
30 pcs.

SCREEN/S4S STOCK



Same basic uses as Squares.



WM 241 8 pcs.
1-1/16 x 2-3/4

WM 243 8 pcs.
1-1/16 x 1-3/4

WM 246 10 pcs.
3/4 x 2-3/4

WM 247 10 pcs.
3/4 x 2

WM 248 15 pcs.
3/4 x 1-3/4

WM 249 15 pcs.
3/4 x 1-5/8

WM 250 15 pcs.
3/4 x 1-1/2

WM 251 20 pcs.
3/4 x 1-3/8

WM 252 20 pcs.
3/4 x 1-1/4

WM 254 40 pcs.
1/2 x 3/4

S4S stock also available in 1/16", 1/2", 9/16", 5/8" and 11/16" standard thickness.

LATTICE



Originally used in trellis work. This small, plain S4S Moulding is among the most versatile of profiles.

WM 265
9/32 x 1-3/4
30 pcs.

WM 266
9/32 x 1-5/8
30 pcs.

WM 267
9/32 x 1-3/8
40 pcs.

WM 268
9/32 x 1-1/8
40 pcs.

WM 269
9/32 x 1-1/2
40 pcs.

Lattice also available in 1/4 thickness.


PICTURE MOULDING



Used to support hooks for picture hanging. Applied around a room's circumference near the ceiling line.




WM 273
11/16 x 1-3/4
20 pcs.

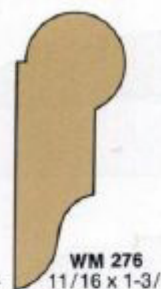

WM 276
11/16 x 1-3/4
20 pcs.

BACK BANDS

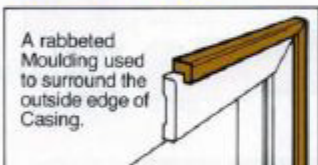

A rabbeted Moulding used to surround the outside edge of Casing.




WM 280
11/16 x 1-1/16
30 pcs.



WM 281
11/16 x 1-1/8
30 pcs.

WAINSCOT/PLY CAP

Trims out the upper edge or top of a Wainscot. Covers plywood's rough sandwich edge in installations where it's exposed to view. Also called a Dado Cap.

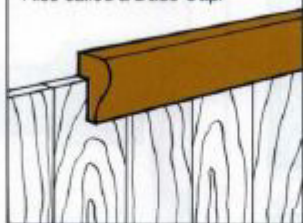

WM 290
11/16 x 1-3/8
25 pcs.



WM 292
9/16 x 1-1/8
40 pcs.



WM 294
11/16 x 1-1/8
30 pcs.



WM 295
1/2 x 1-1/4
30 pcs.



WM 296
0/4 x 0/4
40 pcs.

CHAIR RAILS



Interior Moulding applied about one third up from the floor, paralleling Base Moulding and encircling the room. Originally used to prevent chairs from marring walls. Used today as a key decorative detail in traditional & colonial design.



WM 297
11/16 x 3
10 pcs.



WM 298
11/16 x 2-1/2
12 pcs.



WM 300
1-1/16 x 3
6 pcs.



WM 303
9/16 x 2-1/2
12 pcs.




WM 304
1/2 x 2-1/4
12 pcs.



WM 390
11/16 x 2-5/8
12 pcs.

CASING

Used to trim inside and outside door & window openings.

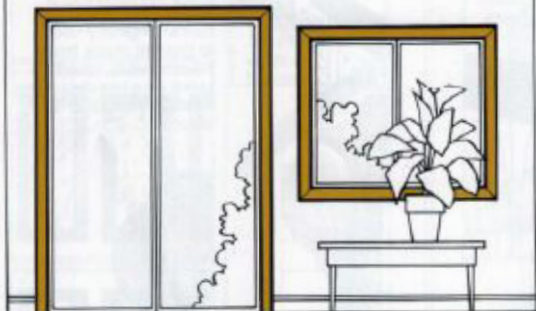

WM 315
11/16 x 2-1/2
12 pcs.



WM 316
11/16 x 2 1/4
12 pcs.



WM 321
11/16 x 2-1/4
12 pcs.



WM 324
11/16 x 2-1/4
12 pcs.



WM 327
11/16 x 2-1/4
12 pcs.




WM 328
11/16 x 2-1/4
12 pcs.



WM 329
11/16 x 2-1/4
12 pcs.



WM 332
11/16 x 2-1/4
12 pcs.




WM 346
5/8 x 2-1/4
12 pcs.



WM 351
11/16 x 2-1/2
12 pcs.



WM 356
11/16 x 2-1/4
12 pcs.



WM 361
11/16 x 2-1/2
12 pcs.



WM 366
11/16 x 2-1/4
12 pcs.



WM 371
11/16 x 2-1/2
12 pcs.








WM 376
11/16 x 2-1/4
12 pcs.



WM 387
5/8 x 2-1/4
12 pcs.

BASE CAPS




A decorative member installed flush against wall and the top of an S4S Baseboard. Also a versatile Panel Moulding.

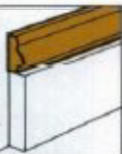

BRICK MOULD





Used as an exterior door & window Casing. A thick Moulding providing a surface for brick or other siding to butt against.

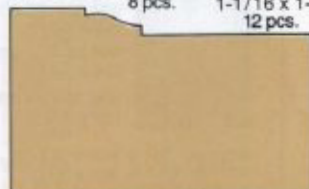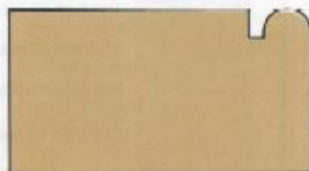

PANEL MOULDINGS




Originally used to trim out raised panel wall construction. Now, often used to frame attractive wall coverings for a paneled effect.




DRIP CAPS











Applied over exterior window & door frames. Keeps water from seeping under the siding. Also directs water away from window glass.

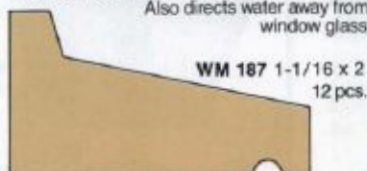

CORNER GUARDS



Outside (OS) Corner Guard is used to protect corners or to cover ragged edge where wall covering and painted surfaces meet at outside corner. (See page 12 for Inside Corner Guard.)

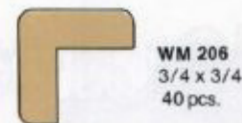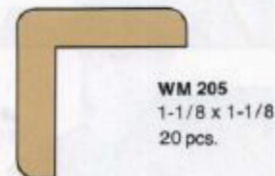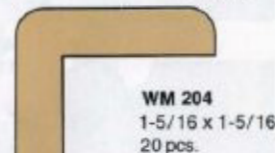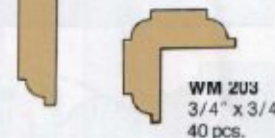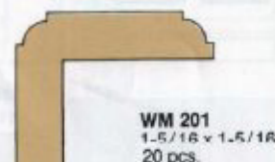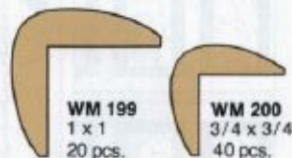

WM 45
11/16 X 5-1/4
8 pcs.

WM 47
11/16 x 4-5/8
8 pcs.

WM 48
11/16 x 4-1/4
8 pcs.

WM 49
11/16 x 3-5/8
8 pcs.

WM 51
11/16 x 3-1/4
10 pcs.


WM 52
9/16 x 2-3/4
12 pcs.

WM 53
9/16 x 2-5/8
12 pcs.

WM 54
9/16 x 2-1/4
12 pcs.

WM 57
9/16 x 3-1/4
10 pcs.

CROWNS

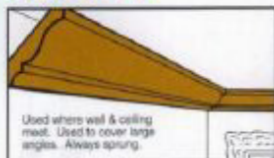

WM 58
9/16 x 2-3/4
12 pcs.





WM 59
9/16 x 2-1/4
12 pcs.

WM 60
9/16 x 1-3/4
20 pcs.












WM 67
9/16 x 2-1/4
12 pcs.

WM 68
9/16 x 1-5/8
20 pcs.

BEDS

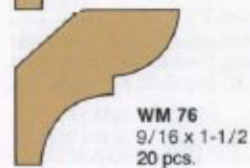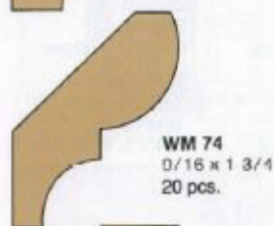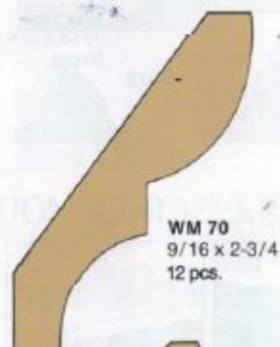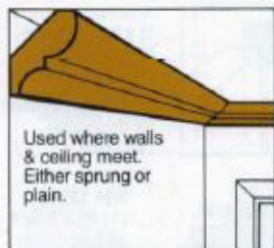

COVES

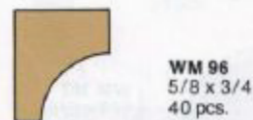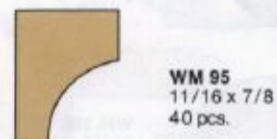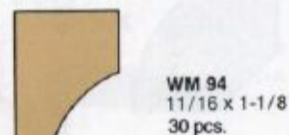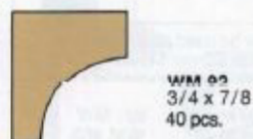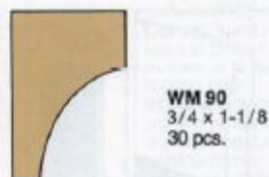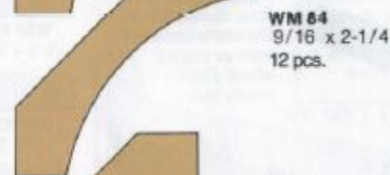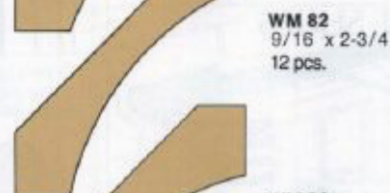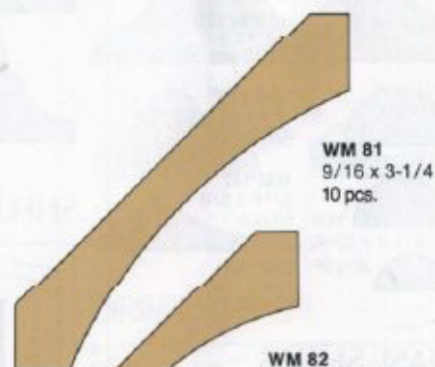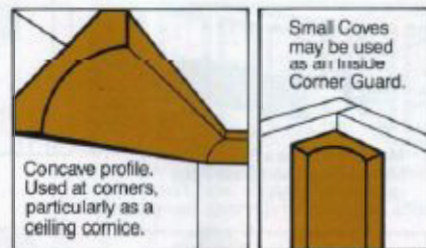



WM 390
11/16 x 2-5/8
12 pcs.



WM 440
11/16 x 2-1/2
12 pcs.



WM 442
11/16 x 2-1/4
12 pcs.



WM 444
11/16 x 3-1/2
10 pcs.



WM 445
11/16 x 3-1/4
10 pcs.




WM 448
11/16 x 3-1/2
10 pcs.



WM 683
5/8 x 3-1/4 10 pcs.



WM 410 11/16 x 4-1/4 8 pcs.
WM 412 11/16 x 3-1/2 10 pcs.
WM 413 11/16 x 3-1/4 (illus.) 10 pcs.



WM 430 9/16 x 4-1/4 8 pcs.
WM 432 9/16 x 3-1/2 10 pcs.
WM 433 9/16 x 3-1/4 (illus.) 10 pcs.




WM 452 11/16 x 2-1/2 (illus.) 12 pcs.
WM 453 11/16 x 2-1/4 12 pcs.




WM 472 9/16 x 2-1/2 (illus.) 12 pcs.
WM 473 9/16 x 2-1/4 12 pcs.




WM 492 7/16 x 2-1/2 (illus.) 20 pcs.
WM 493 7/16 x 2-1/4 20 pcs.

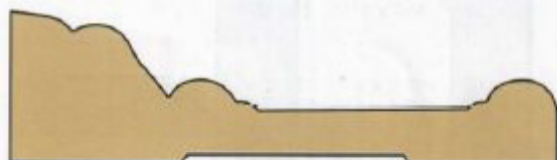

WM 503
1 x 3-1/2
6 pcs.

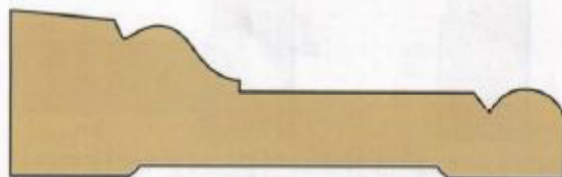

WM 520
1-1/16 x 3-1/2
6 pcs.

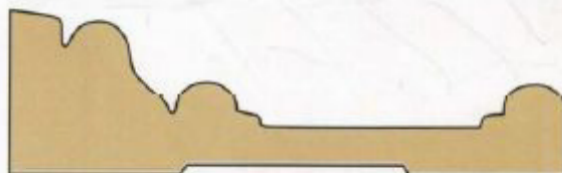

WM 523
1-1/16 x 3-1/2
6 pcs.



- WM 618** 9/16 x 5-1/4 8 pcs.
WM 620 9/16 x 4-1/4 8 pcs.
WM 622 9/16 x 3-1/2 10 pcs.
WM 623 9/16 x 3-1/4 10 pcs.
 (illus.)
WM 624 9/16 x 3 10 pcs.


- WM 632** 1/2 x 3-1/2 10 pcs.
WM 633 1/2 x 3-1/4 10 pcs.
 (illus.)
WM 634 1/2 x 3 10 pcs.



- WM 709** 9/16 x 4-1/2 8 pcs.
WM 710 9/16 x 4-1/4 8 pcs.
WM 712 9/16 x 3-1/2 10 pcs.
WM 713 9/16 x 3-1/4 10 pcs.
 (illus.)
WM 714 9/16 x 3 10 pcs.



- WM 722** 1/2 x 3-1/2 10 pcs.
WM 723 1/2 x 3-1/4 10 pcs.
 (illus.)
WM 724 1/2 x 3 10 pcs.
WM 725 1/2 x 2-1/2 12 pcs.
WM 726 1/2 x 2-1/4 12 pcs.

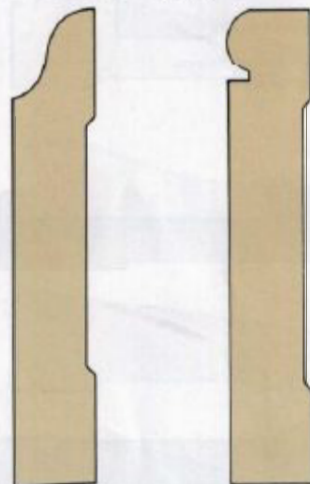


- WM 658** 9/16 x 5-1/4 8 pcs.
WM 660 9/16 x 4-1/4 8 pcs.
WM 662 9/16 x 3 1/2 10 pcs.
WM 663 9/16 x 3-1/4 10 pcs.
 (illus.)
WM 664 9/16 x 3 10 pcs.

- WM 750** 9/16 x 4-1/4 8 pcs.
WM 752 9/16 x 3-1/2 10 pcs.
WM 763 9/16 x 3 1/4 10 pcs.
 (illus.)



- WM 738**
 9/16 x 5-1/4
 8 pcs.

BASE MOULDINGS

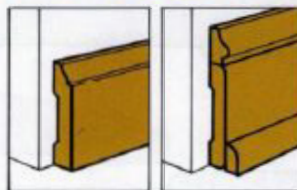

Applied where floor & walls meet, forming a visual foundation. Protects walls from kicks, bumps, furniture, etc. Base may be referred to as One, Two or Three-Member. Base Shoe & Base Cap are used to conceal uneven floor & wall junctions.